


Parts List


Eccentric Element MPV 70/100

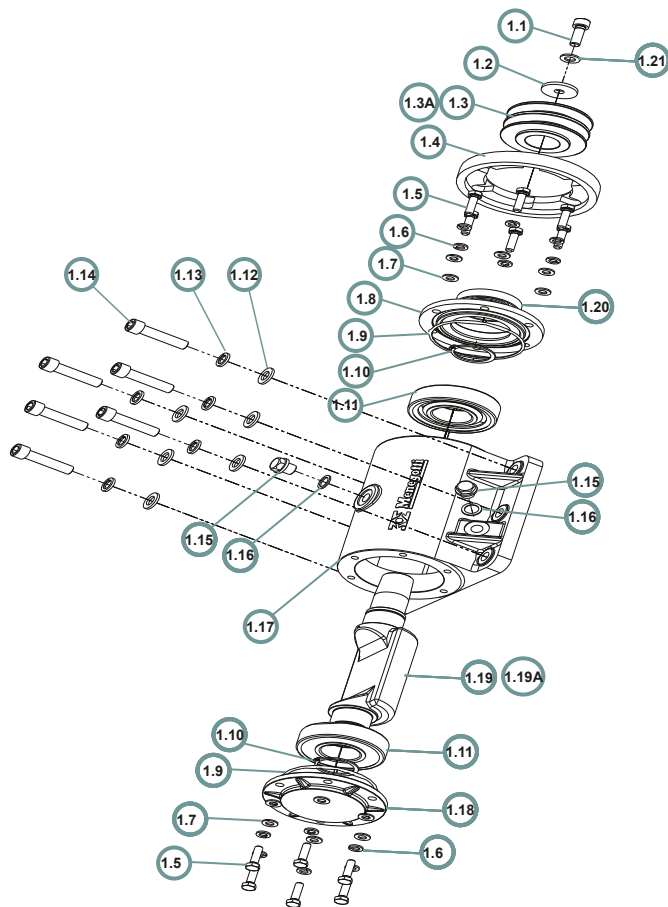

POS.	KITS DESCRIPTION MPV 70/100	QTY.	CODE	DRAWING
-	Eccentric Element MPV70 Complete [Pos. 1.1 to 1.11 and 1.15 to 1.21]	1	32040240	3148011
-	Eccentric Element MPV100 Complete [Pos. 1.1 to 1.11 and 1.15 to 1.21]	1	32040242	3148012


POS.	DESCRIPTION MPV 70/100	QTY.	CODE	DRAWING
1.1	Screw Hexagonal M10 x 35	1	29111095	-
1.2	Flat Washer 3/8" Diam. 36.5mm Zinc. Esp 4	1	21030235	-
1.3	Moved Pulley MPV 100	1	31090261	4.148.032
1.3A	Moved Pulley MPV 70	1	31090260	4.128.031
1.4	Rubber Flange	1	24030248	4.148.032
1.5	Screw Hexagonal M8 x 30 DIN 933	6	21012811	4.148.033
1.6	Spring Washer DN 8 DIN 7980Z	6	21030505	-
1.7	Flat Washer 8mm Galvanized	6	21030702	-
1.8	Front Cover	1	32250012	4.128.029
1.9	Sealing O-ring	2	29112121	-
1.10	Elastic Ring E-40	2	21060136	-
1.11	Rolamento 6308-Z	2	29110737	-
1.12	Flat Washer M12	6	29110907	-
1.13	Spring Washer DN 12mm DIN 127 Zinc	6	21030407	-
1.14	Screw Hexagonal M12 x 45	6	29110923	-
1.15	Oil Plug M14x1.5mm	2	29111105	-
1.16	Copper Sealing Washer	2	21030714	-
1.17	Excentric Housing	1	32250011	3.148.015
1.18	Back Cover	1	32250013	4.148.030
1.19	Shaft Eccentric MPV100	1	32250009	3.148.017
1.19A	Shaft Eccentric MPV 70	1	32250017	3.148.016
1.20	Retainer TC D35 x D65 x 12mm 4c	1	24010124	-
1.21	Flat Washer 3/8" Diam. 36.5mm Zinc. Esp 4	1	21030235	-

Handlebar and Base Assembly MPV 70/100

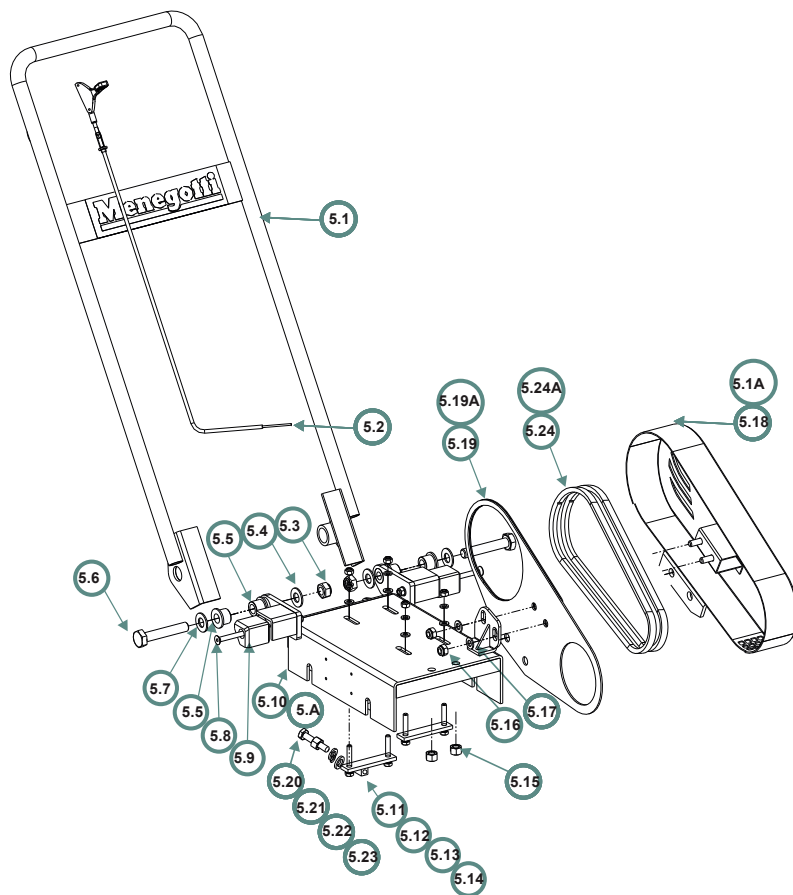

POS.	DESCRIPTION MPV 70/100	QTY.	CODE	DRAWING
5.1	Handlebar MPV	1	32270070	4.148.053
5.2	Accelerator	1	29112001	-
5.3	Self Locking Nut M-16 5,8 DIN 985 Zinc	2	21021209	-
5.4	Flat Washer DN 16 DIN 125	2	21030679	-
5.5	Handlebar Bearing Bush	2	25120124	4.148.057
5.6	Screw Hexagonal M8x70	2	21012857	-
5.7	Flat Washer DN 16 DIN 125	2	21030679	-
5.8	Screw Hexagonal M8x70	2	21014639	-
5.9	Rubber Stop	2	24030247	-
5.10	Engine Base MPV100	1	32610787	3.148.010
5.10A	Engine Base MPV70	1	3610786	3.148.009
5.11	Stretcher	1	32610788	4.148.024
5.12	Flat Washer 8mm Galvanized	4	21030702	-
5.13	Spring Washer DN 8 DIN 7980 Zinc	4	21030505	-
5.14	Self Locking Nut M-8 DIN 985 Zinc	4	21021205	-
5.15	Fastener M12	1	32610789	4.148.027
5.16	Self Locking Nut M-10 DIN 985 Zinc	2	21021206	-
5.17	Flat Washer DN 10 DIN 125	2	21030676	-
5.18	Pulley Protection Assembly MPV100	1	32610791	4.148.040
5.18A	Pulley Protection Assembly MPV70	1	32610790	4.148.036
5.19	Protection Closure Assembly MPV100	1	32610793	4.148.048
5.19A	Protection Closure Assembly MPV70	1	32610792	4.148.045
5.20	Screw Hex. RI M12x80 8.8	1	21012983	-
5.21	Hexagonal Nut M12 CL 8.8	1	21021116	-
5.22	Pressure Nut DN 12mm DIN 127 Zin	1	21030407	-
5.23	Flat Washer M12	1	29110907	-
5.24	V-Belt - AX - 31 MPV 70	2	22010109	-
5.24A	V-Belt - AX - 34 MPV 100	2	22010147	-


Vibratory Base MPV 100

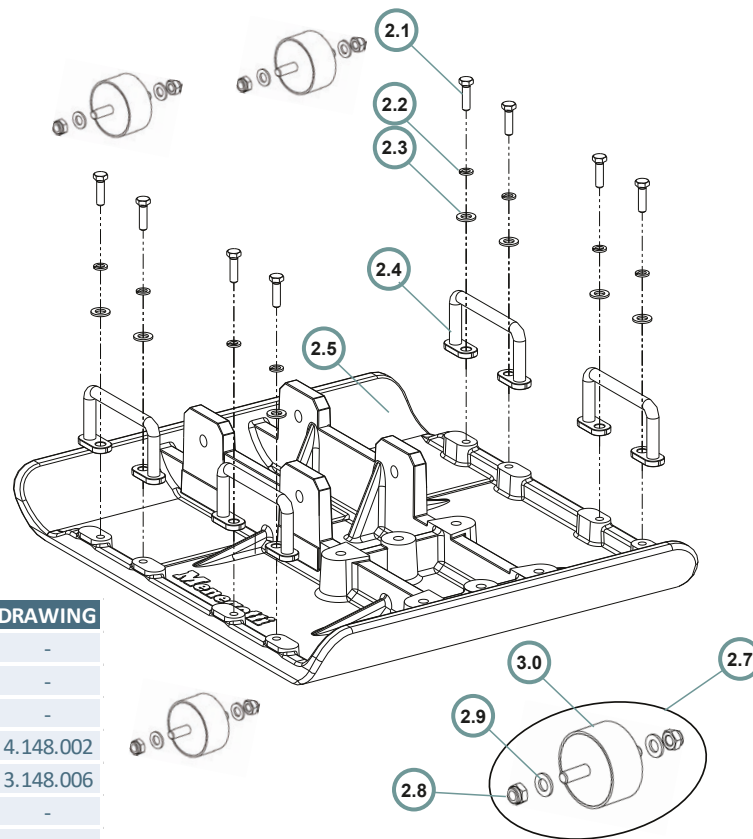

POS.	DESCRIPTION MPV 100	QTY.	CODE	DRAWING
2.1	Screw Hex. M8x30 DIN 933	8	21012811	-
2.2	Spring Washer DN 7980 Zinc	8	21030505	-
2.3	Flat Washer 8mm Galvanized	8	21030702	-
2.4	Handle	4	32610794	4.148.002
2.5	Vibratory Base	1	32250014	3.148.006
2.7	Complete Cushion	4	32040237	-
2.8	Self Locking Hex. Nut M12x1,75 DIN985	8	21021207	-
2.9	Flat Washer M12	8	29110907	-
3.0	Cushion	4	N/A	-


N/A: Item is not sold separately.

Vibratory Base MPV 70

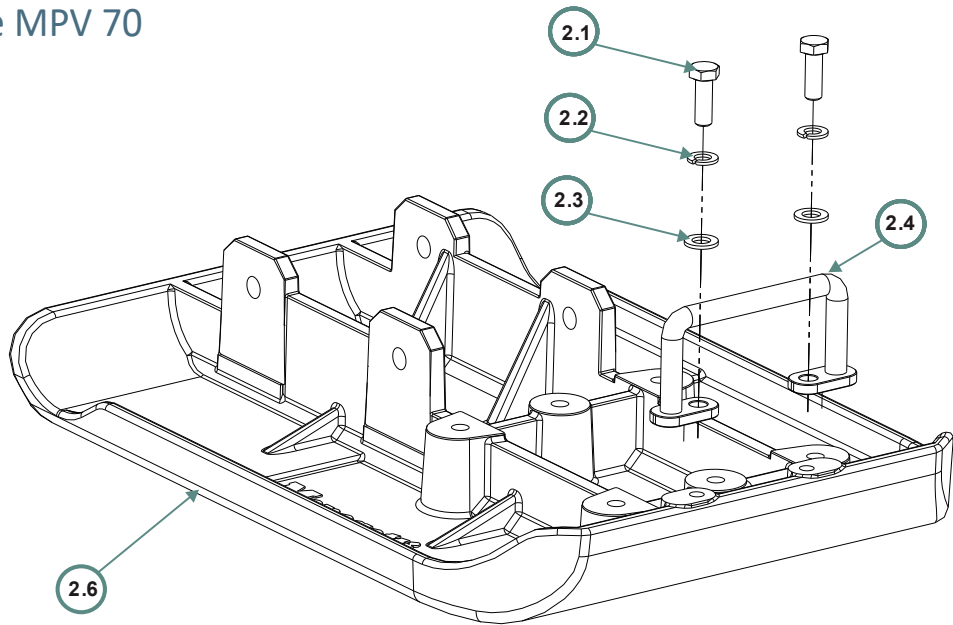


POS.	DESCRIPTION MPV 70	QTY.	CODE	DRAWING
2.1	Screw Hex. M8x30 DIN 933	8	21012811	-
2.2	Spring Washer DN 7980 Zinc	8	21030505	-
2.3	Flat Washer 8mm Galvanized	8	21030702	-
2.4	Handle	4	32610794	4.148.002
2.5	Vibratory Base	1	32250014	3.148.006

Sprinkler System Assembly MPV 100

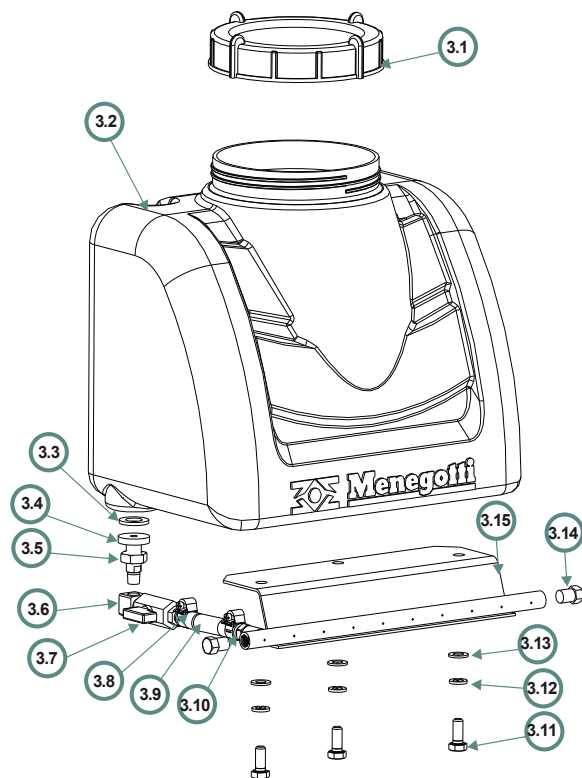


POS.	DESCRIPTION MPV 70/100	QTY.	CODE	DRAWING
3.1	Water Tank Cover MPV100	1	29121011	-
3.2	Water Tank MPV100	1	29121010	3.148.027
3.3	Flat Washer M12	1	29110907	-
3.4	Male Terminal M12 and 1/8 NPT	1	29112176	-
3.5	Brass nut M12 Thick 7mm	1	29112179	-
3.6	Female Short Elbow 1/8NPT/Male 1/4SPT	1	2911277	4.148.083
3.7	Female Register BSP Mini 1/4"	1	29111783	-
3.8	Endless Clamp D.Int 12-16mm	2	29754059	-
3.9	Braided Hose 3/8	1	25100209	-
3.10	Male Terminal 1/8 NPT x	1	29112100	-
3.11	Screw Hexagonal M8x20 DIN933	3	21012809	-
3.12	Spring Washer DN 8 DIN 7980 Zinc	3	21030505	-
3.13	Flat Washer 8mm Galvanized	3	21030702	-
3.14	Plug Hex. 1/8 NPT	2	29112098	-
3.15	Sprinkler Assembly MPV	1	32270074	4.148.073

Engine Protection and Engine MPV 100

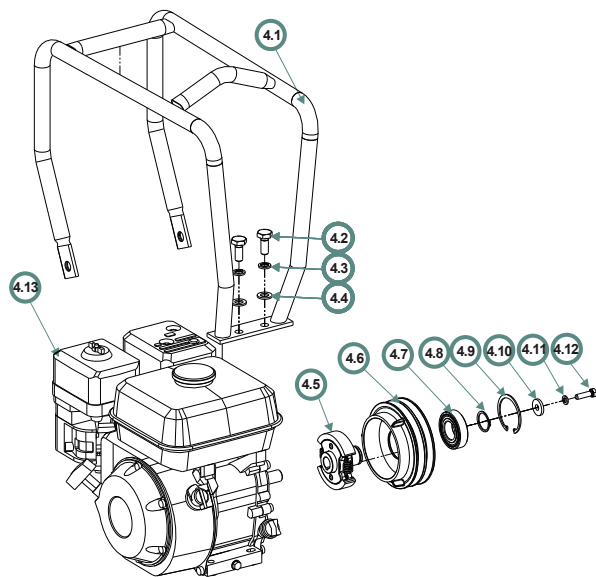


POS.	DESCRIPTION MPV 70/100	QTY.	CODE	DRAWING
4.1	Engine Protection	1	3148020	3.148.020
4.2	Hex. Screw M12X30 DIN933 CL8.8 Z	2	21012822	-
4.3	Spring Washer DN 12mm DIN 127 Zin	2	21030407	-
4.4	Flat Washer M12	2	29110907	-
POS.	DESCRIPTION MPV 70/100	QTY.	CODE	DRAWING
4.5	Clutch MPV 70/100	1	29112000	-
4.6	Engine Pulley MPV 70/100	1	32250010	4.148.034
4.7	Bearing 6206ZZ	1	29111771	-
4.8	Elastic Ring E-30	1	21060127	-
4.9	Elastic Ring I-62	1	21060254	-
4.10	Flat Washer Steel 3/8" x 27 x 4.0mm	1	21030236	-
4.11	Spring Washer DN 8 Zinc	1	21030505	-
4.12	Hexagonal Screw M8 x 30 Din 933	1	21012811	-
4.13	Honda Engine GX160 MPV 70/100	1	23040154	-

Kit Wheels MPV 70/100

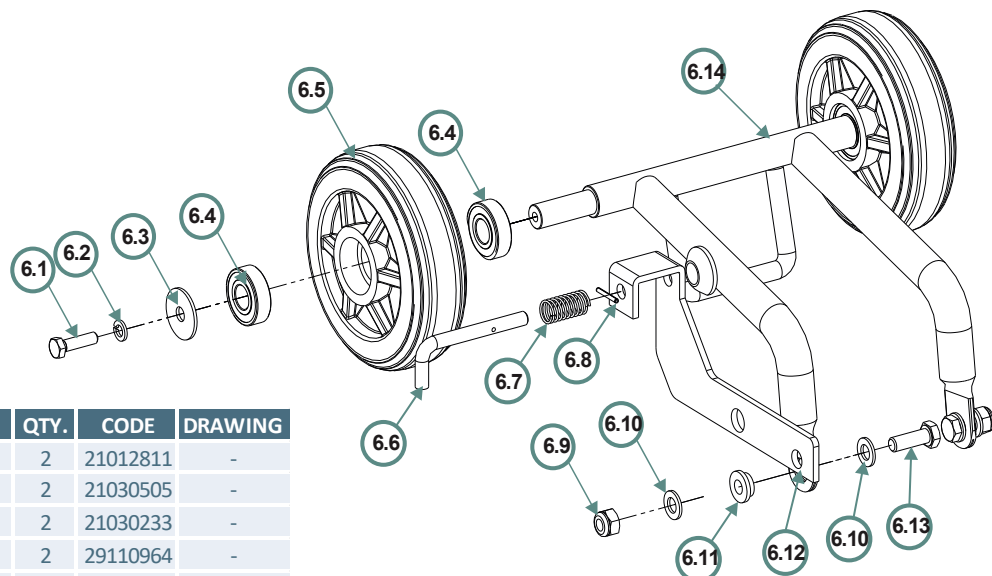

POS.	DESCRIPTION MPV 70/100	QTY.	CODE	DRAWING
6.1	Hexagonal Screw M8x30 DIN 933	2	21012811	-
6.2	Spring Washer DN 8 DIN 7980 Zinc	2	21030505	-
6.3	Flat Washer 3/8" Diam. 36,5mm Zinc	2	21030233	-
6.4	Bearing 6203 ZZ	2	29110964	-
6.5	Wheel	2	4148066	4.148.066
6.6	Pin Lock	2	29121545	4.148.069
6.7	Spring Compression	1	21090310	-
6.8	Heavy Rubber Pin 3x24	1	21040181	-
6.9	Self Locking Nut M-10 DIN 985 (ZIN)	2	21021206	-
6.10	Flat Washer DN 10 DIN 125	2	21030676	-
6.11	Bearing Bush Kit Wheels	2	25120123	4.148.070
6.12	Support Wheel Lock	1	32270066	-
6.13	Hexagonal Screw M10x30 DIN 933 8.8 Zinc	2	21012816	-
6.14	Wheel Kit Arm Assembly	1	29121009	4.148.061

Optionals

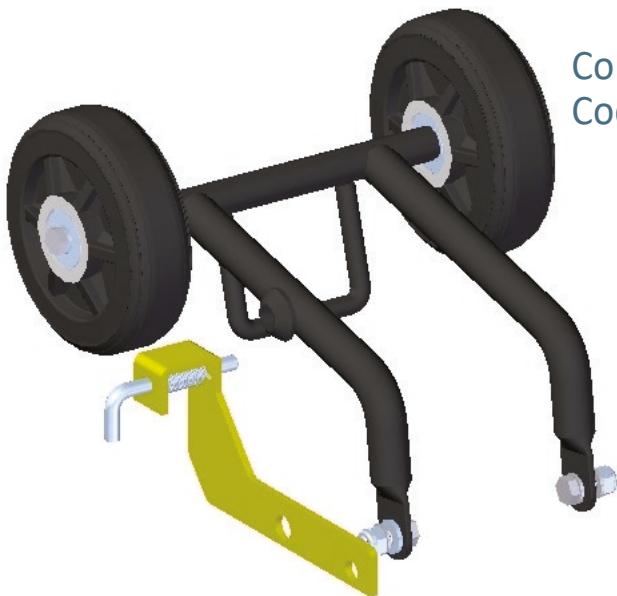

Complete Wheel Assembly MPV 70/100
Code: 32270073

Sprinkler System Assembly MPV 100
Code: 32040244



Product Warranty

The conditions and terms of this warranty are non transferable and go into effect on the date of purchase of this equipment, proven by presentation of the sales invoice issued to the first end user. At the time of delivery of the equipment, the customer must be provided with the information and technical orientations according to the contents of this manual.

Not, however, included in this warranty are defects arising from improper use, negligence, imprudence or malpractice, nor are repairs or alterations to any part and/or component of the equipment. Also not included are: the assembly of any sets of parts by technicians not from the Factory itself or from an Authorized Technical Assistant, application other than which it was specified, mechanical or electrical overloading as well as lack of phase, use in environments for which it was not designed, incorrect voltages and frequencies, incorrect lubrication, damage caused by accidents of any nature, such as floods, gales, fire, landslides or due to transportation.

Removal or any alteration to the series numbers originally placed on the product will render the warranty null, where the Sales invoice and Warranty Certificate must be presented in relation to the equipment in question.

This warranty is limited to the repair, replacement of parts or assembly of parts in which, through examination by a Menegotti Authorized Technical Assistant with prior authorization from the Factory, any manufacturing defect will be verified. This repair or replacement will be performed by the authorized Technical Assistant, where the purchaser will be responsible for risks and expenses arising from transport to and from the authorized Technical Assistant, and where labor and parts will not be charged according to the terms of this warranty.

This warranty replaces any other warranty, implicit or explicit, as well as all any obligation or responsibility on the part of our company in relation to the above mentioned product.

MENEGOTTI Post Sales Department and Technical Assistance.

Term of Warranty

By the present CERTIFICATE provided from original purchaser, Menegotti guarantees this product against manufacturing defects, for a period of 12 (twelve) months, counted from the invoice issue date of the first final consumer. This equipment's warranty does not include components worn out by use, such as: bearings, steel cable, electrical plugs, gears and engine breaking.

This warranty includes the replacement of parts and repairs due to manufacturing defects duly noted by the factory or Authorized Technical Assistant. This warranty will be rendered null and void in the case of damages arising from accidents, acts of nature, application other than which it was designed, connection to improper electrical supply or subjected to extensive power fluctuations, or, if opened by persons or workshops not authorized by Menegotti.

The consumer will be responsible for freight expenses for transporting the product to the technical assistant or factory. The equipment includes and electric motor and this warranty covers internal defects in the motor originating from its manufacture. Defects not covered in this warranty include: overloading due to lack of or excessive phase, use of voltage outside that specified, broken or crushed casing due to negligence during transporting /or storage, coupling or energizing outside specifications and general defects from improper use and/or incorrect installation.

In agreement with these terms,

Customer: _____
Model: _____ **Serial Number:** _____
City: _____ **Date:** _____

Customer *Menegotti Authorized Service*

Menegotti GROUP

Solid values, **sustainable future.**

MENEGOTTI
HANDLING

MENEGOTTI
CONSTRUCTION

MENEGOTTI
HOUSE & GARDEN



Unit • Unidat Menmaq

Erwino Menegotti, 381 - Água Verde
Jaraguá do Sul - SC - 89254-000



Unit • Unidat Mentec

José Theodoro Ribeiro, 2399 - Ilha da Figueira
Jaraguá do Sul - SC - 89258-468



Unit • Unidat Menfer

Saudade, 186 - Seminário
Corupá - SC - 89278-000



Unit • Unidat MNA

248 E Crogan St STE 301 - Lawrenceville - GA
30046 - United States

grupomenegotti.com